


DELUXE 15" STAINLESS STEEL SMOKELESS OUTDOOR FIREPIT SET

Model: FIREPIT15

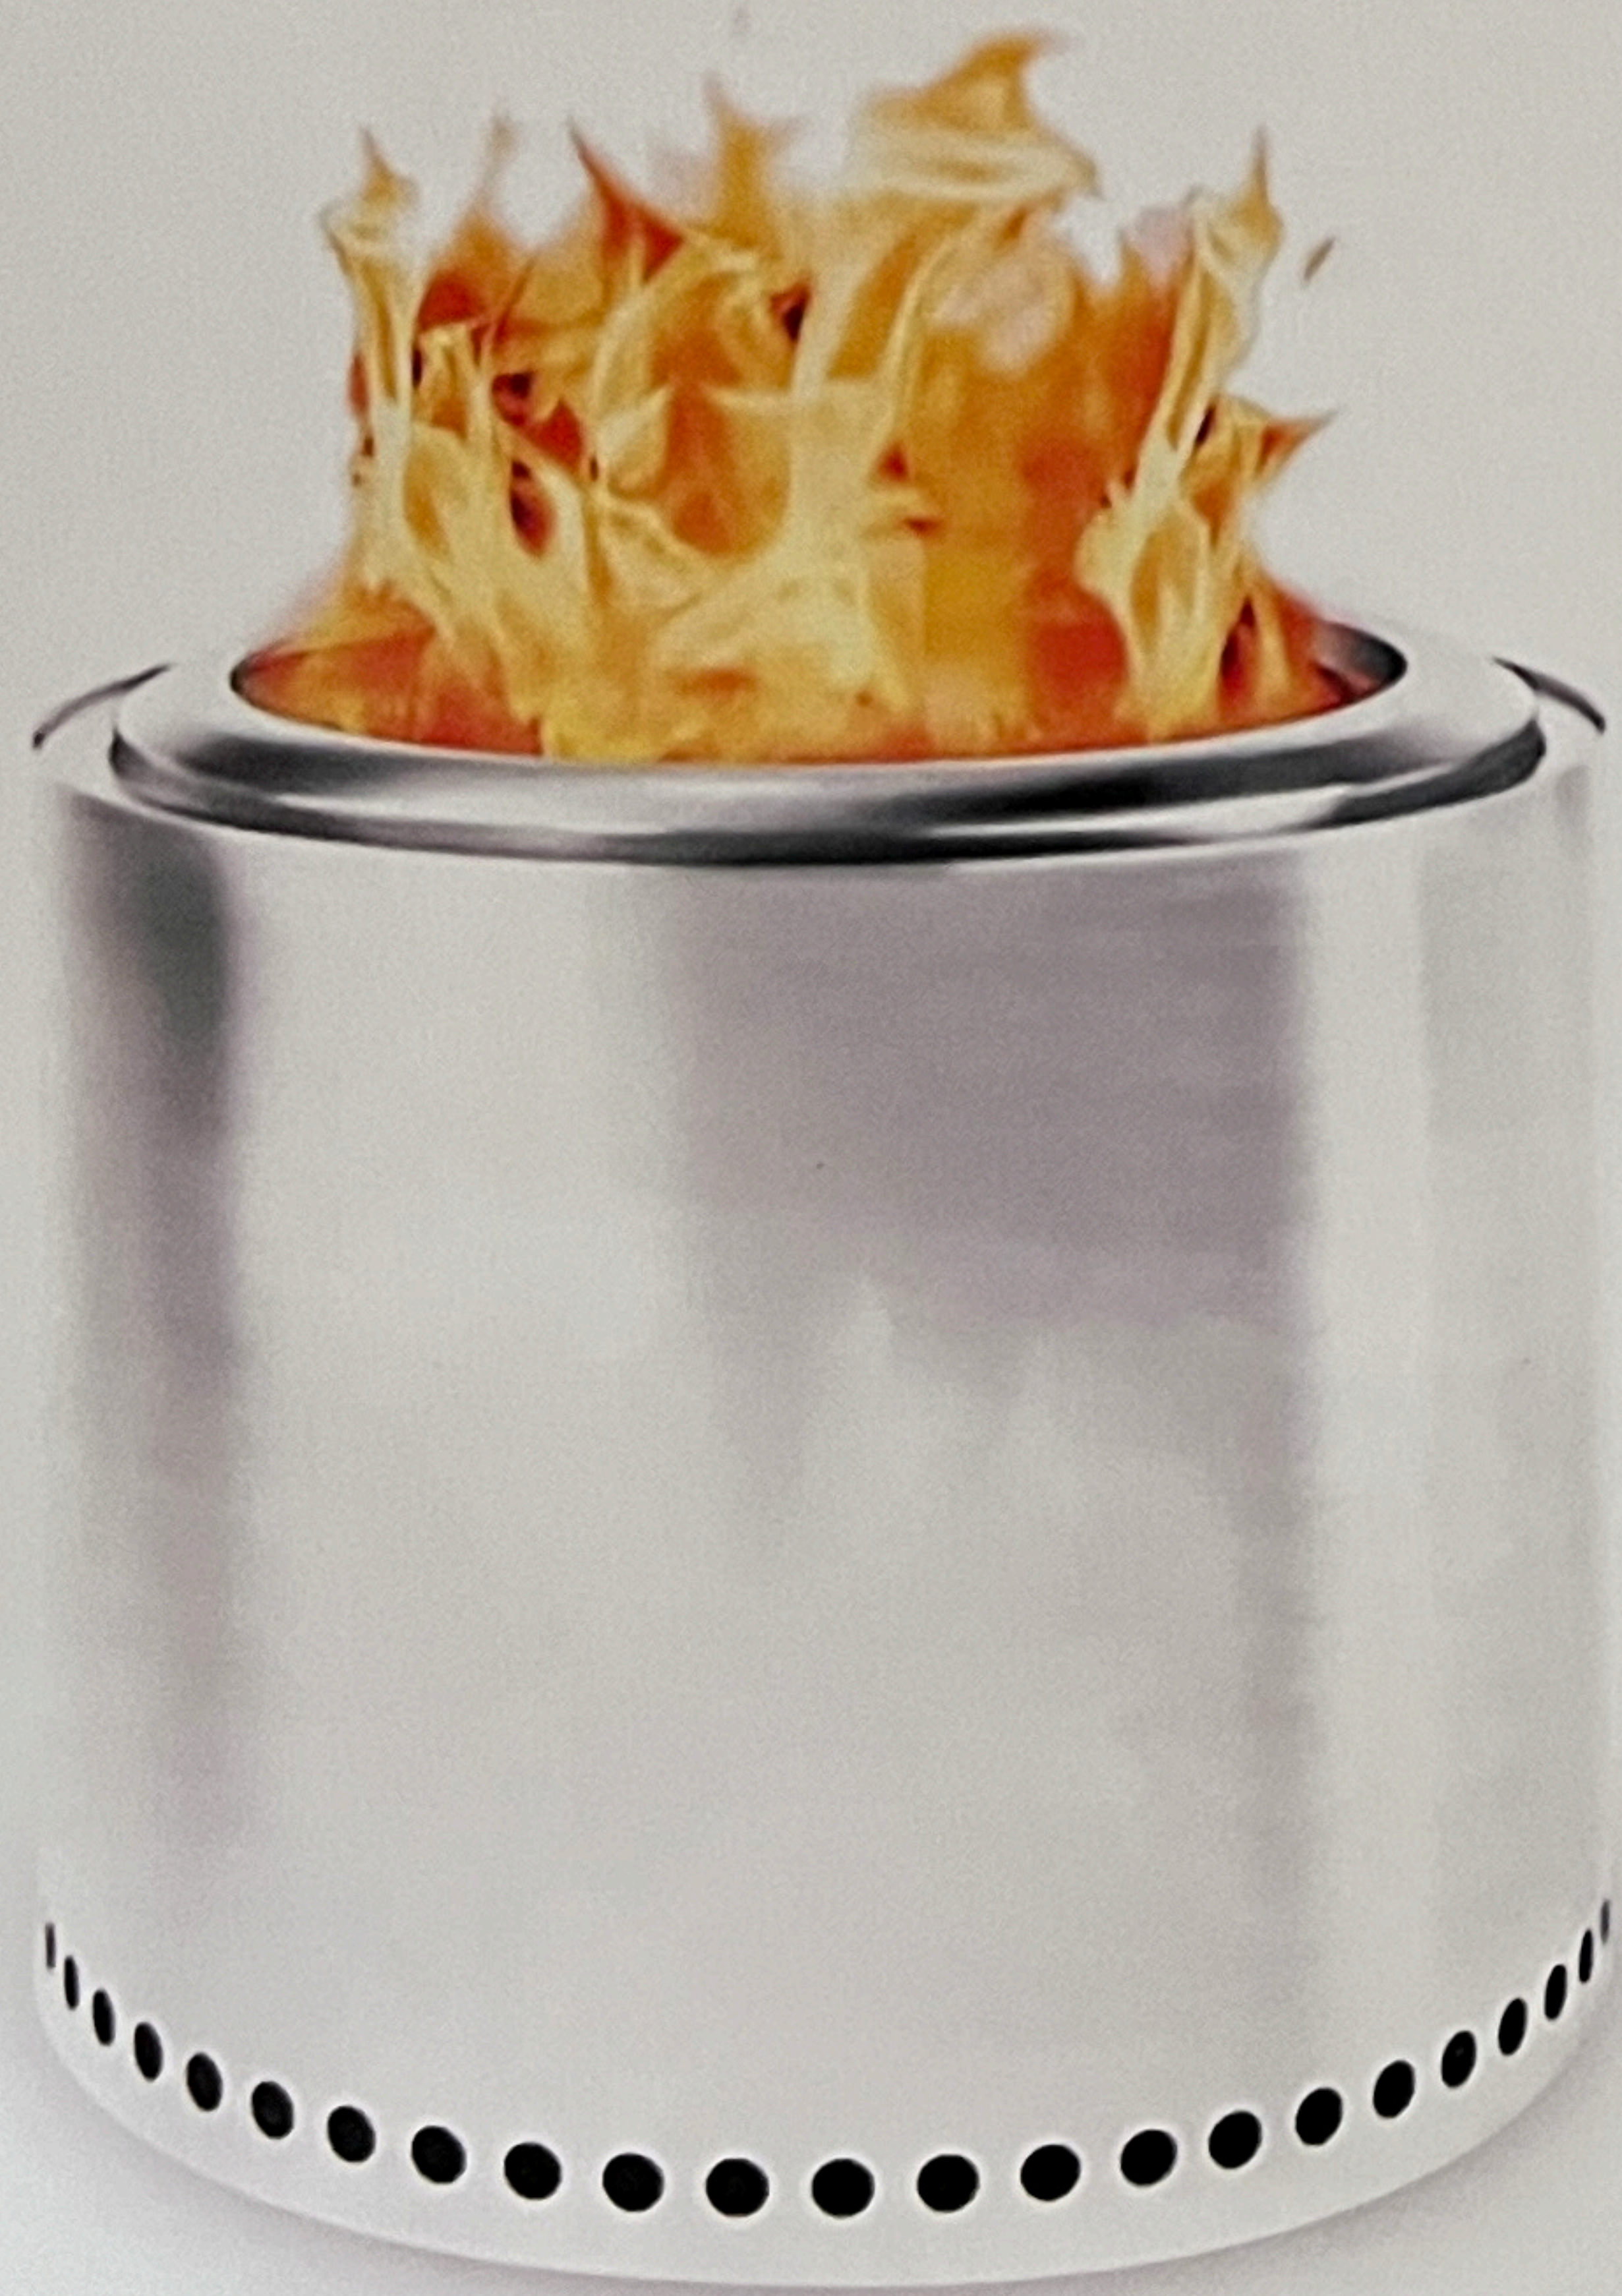

Thank you for purchasing our Deluxe Smokeless Firepit set!

Your Firepit has been designed using high quality stainless steel for years of enjoyment. Our Smokeless Firepit is engineered to bring cool air in from the bottom of the unit and up through the hollow sidewalls. Along the way, the air is superheated and expelled out of the top air channels where a secondary burn phase literally burns away the smoke. The results are a fast lighting, intense burning, beautiful fire with very little smoke produced once the fire is established! The handy cooking platform is terrific for any heavy gauge frying pan, such as stainless steel or cast iron, so you can enjoy your outdoor campfire and put together a delicious meal all at the same time.

THIS PRODUCT IS FOR OUTDOOR USE ONLY

SPECIFICATIONS

Material	304 stainless steel
Net weight (excluding accessories)	5.8kgs / 12.8lbs
Gross weight	9.5kgs / 20.9lbs
Packing size	43.3x43.5x39.5cm / 17.0x17.1x15.6"
Fuel	Firewood / wood pellets

HOW TO CARE FOR YOUR FIREPIT

After each use, allow your firepit to thoroughly cool, then empty.

Dry off the firepit before storage.

You can expect some tarnish and weathering of the steel as time goes on but, to keep the firepit in top shape, store in its durable carry bag when not in use.

ALWAYS USE CAUTION WHEN OPERATING

Use outdoors only, positioned on a flat, stable, non-flammable surface, such as the ground, rock or sand. Keep intake holes clear.

Keep any flammable objects at least 90cm (35.4") away from the firepit while hot.

Do not leave the fire unattended while in use.

Light as you would any small campfire. Light small kindling and paper on the bottom. As fire is established, add larger pieces.

Avoid the use of liquid accelerants.

Allow the flames no higher than a few inches above the fire ring.

Keep children and pets away while in operation: Outer surfaces will be HOT.

If using the cooking platform, allow the fire to burn below the top fire ring and make sure the cooking platform is solidly seated to the upper rim of the fire pot (see image) before placing cooking pan in place.

Detach carry handles while the unit is in operation and do not attempt to move the unit while in use (even with the handles).

When finished, allow the fire to burn itself out and do not handle the firepit until it is completely cool.

After every use, when the unit is cool, clean out the ashes from the bottom and store in the convenient carry bag.

